

SAFETY INSTRUCTIONS

- Please read ALL instructions carefully before using bottle warmer.
- DO NOT IMMERSE IN WATER
- Test temperature of the milk, formula, or baby food before feeding baby.
- Always unplug bottle warmer and remove bottle from bottle warmer before feeding baby.
- Do not use to warm disposable bottles.
- Overheating may damage the bottle be sure to check temperature every 5 minutes.

OPERATING INSTRUCTIONS

- Squeeze clip with thumb and forefinger and slide adjustable heating band through slot.
- Place bottle inside and tighten adjustable heating band by lifting the clip, pulling tight, and then releasing the clip. Make sure the bottom of the bottle pushes the safety switch down.
- 3. Hang up unit with the hanging strap or place the unit in a standard cup holder.
- Plug adapter into car lighter and push the ON button. The power LED indicator will turn on.
- Check temperature every five minutes milk, formula, or baby food will heat up in approximately 15 minutes.
- Unplug adapter when bottle reaches feeding temperature. Remove bottle from bottle warmer before feeding the baby.

CLEANING INSTRUCTIONS

- Unplug and allow to cool completely.
- · Clean all surfaces with a damp cloth.

CARE INSTRUCTIONS

- Do not use the power cord as a handle. Never pull on the power cord.
- Do not use the unit if any signs of deterioration appear on the unit or on the power cord.
- If the car lighter adapter stops working, the fuse may need to be replaced. Simply unscrew the tip by hand and remove old fuse. Replace with a new 2.0A 250V glass fuse and screw the tip back on. FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE WITH ONLY SAME TYPE AND RATING OF FUSE.
- Never attempt to repair the unit yourself, as it will likely damage the unit. If within the warranty period, simply return the unit with proof of purchase, and DEX Products will gladly repair it or replace it.

toll free: 800.546.1996 www.dexbaby.com